


NLV Compressor

SECOP

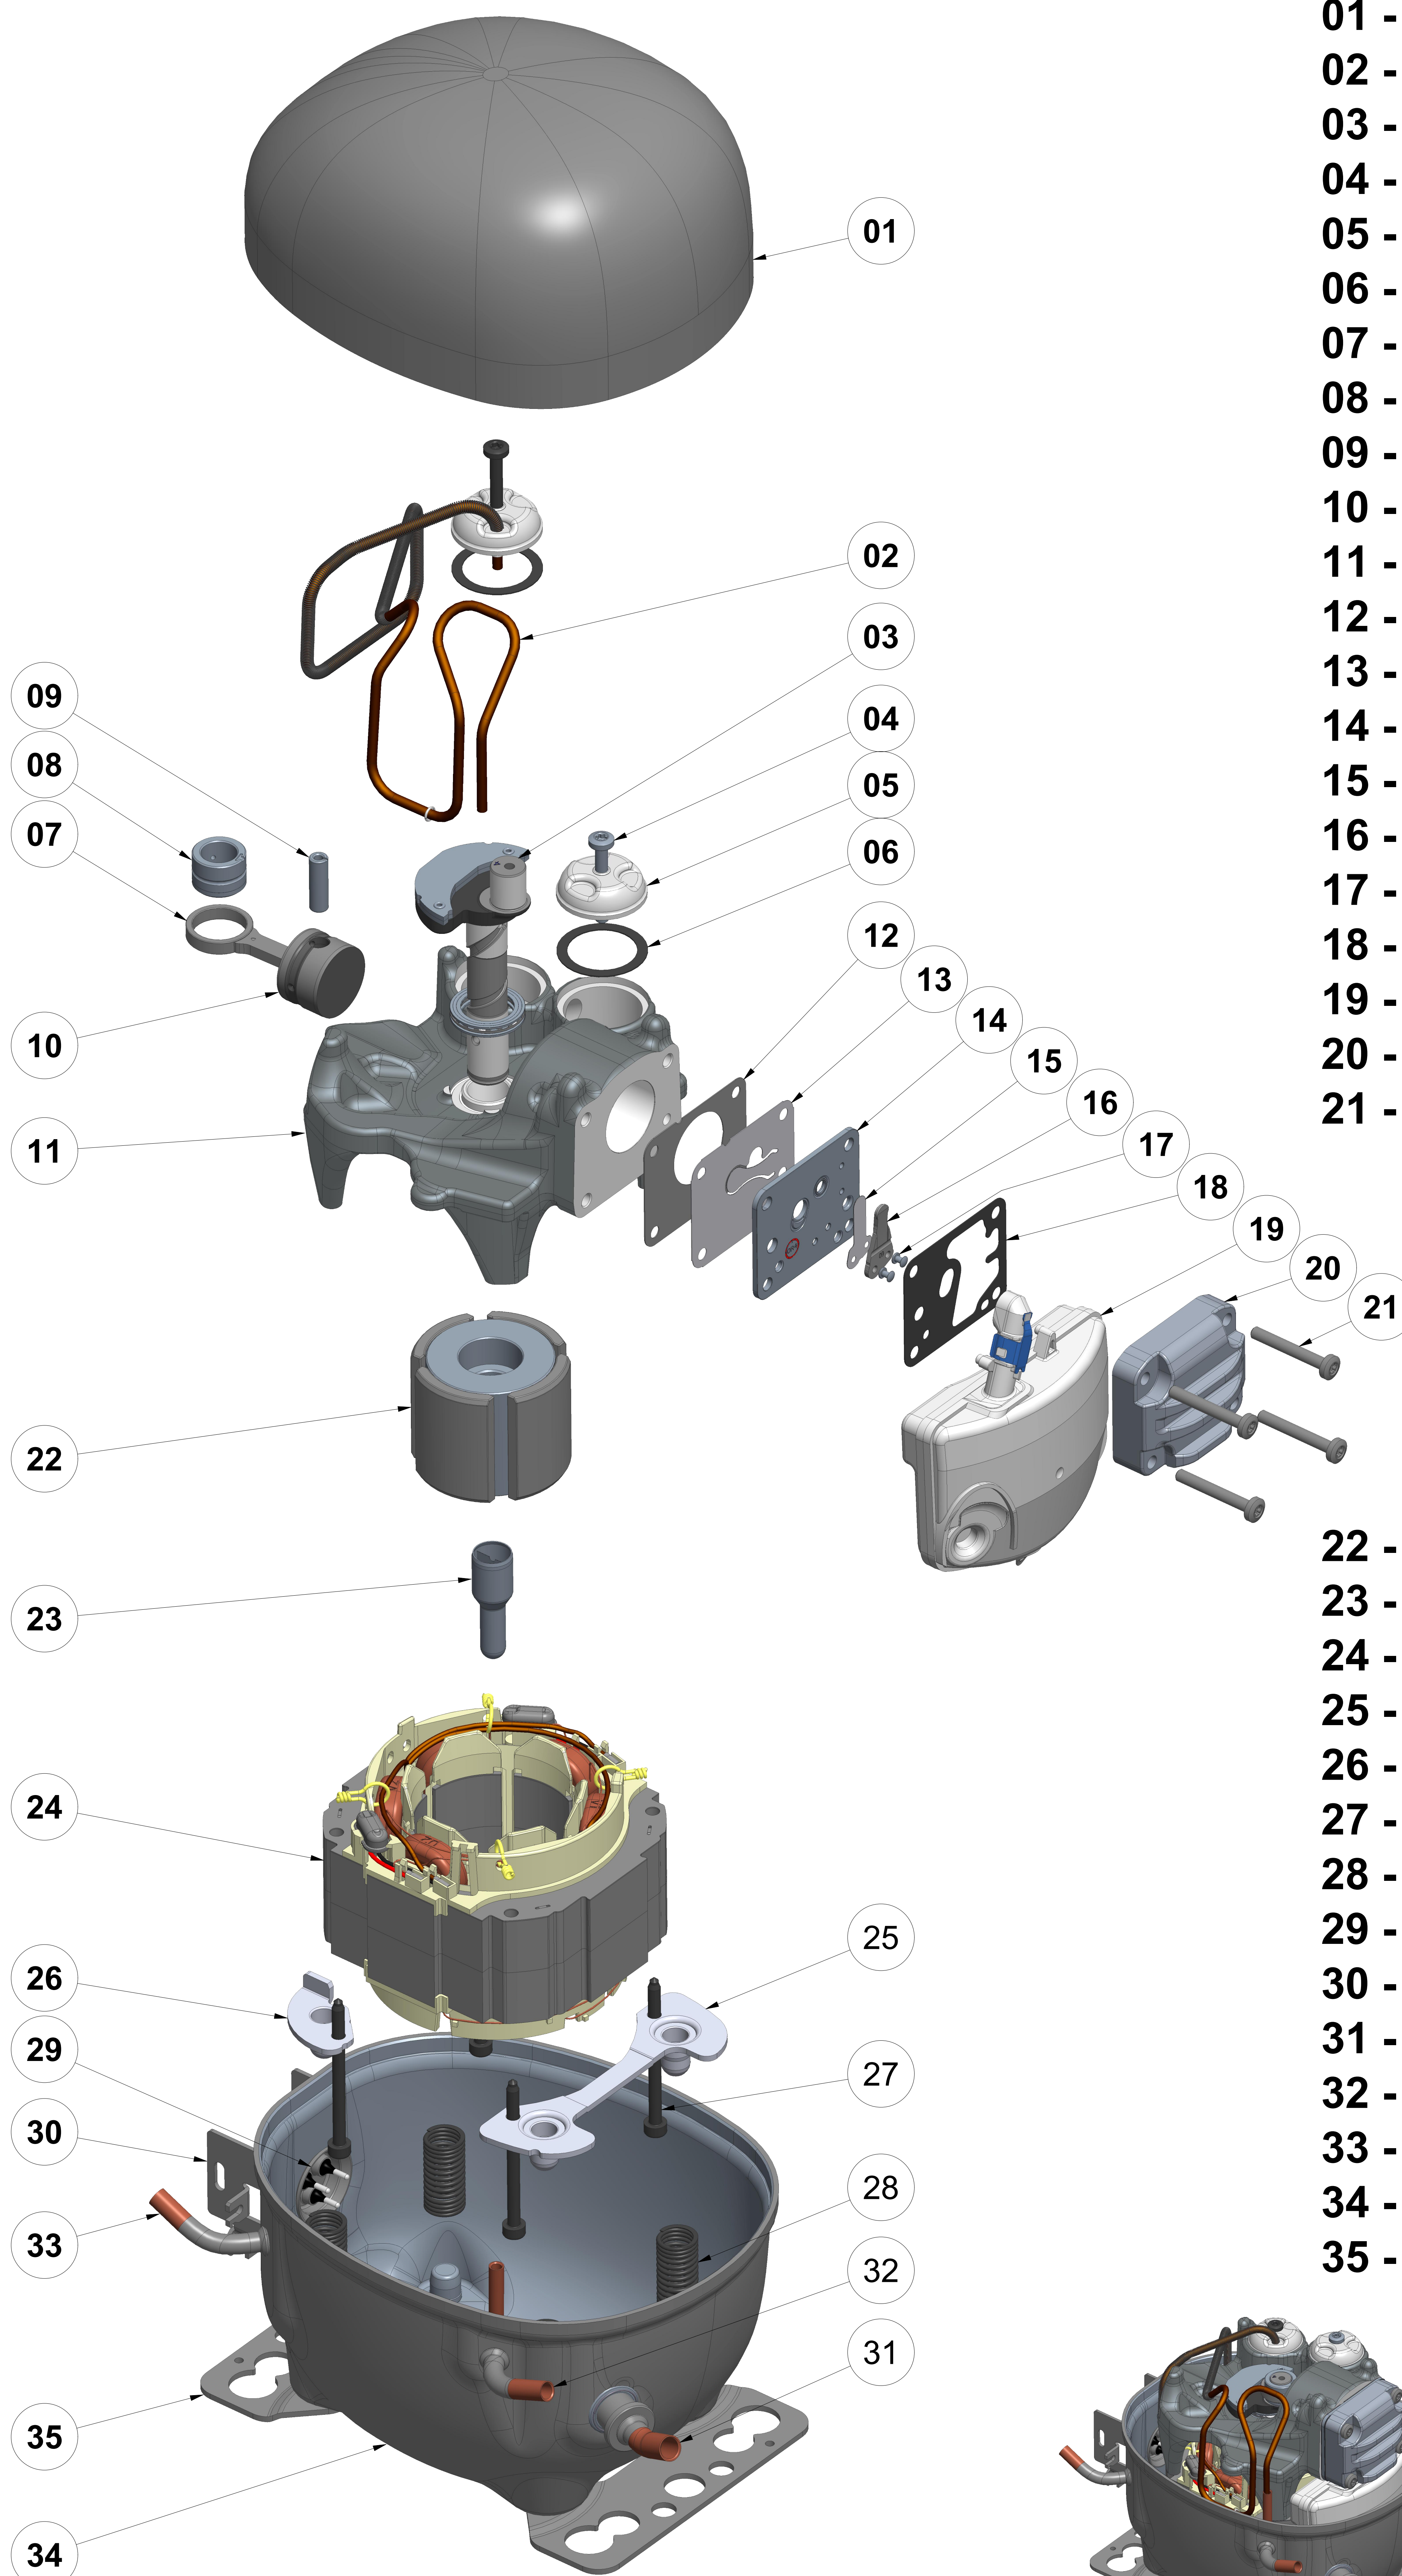

- 01 - Compressor cover
- 02 - Internal discharge tube
- 03 - Crankshaft
- 04 - Discharge muffler screw
- 05 - Discharge muffler cover
- 06 - Discharge muffler gasket
- 07 - Conrod
- 08 - Conrod bush
- 09 - Piston pin
- 10 - Piston
- 11 - Crankcase
- 12 - Valve plate gasket
- 13 - Suction valve
- 14 - Valve plate
- 15 - Discharge valve
- 16 - Discharge valve stopper
- 17 - Valve package rivet
- 18 - Cylinder head gasket
- 19 - Suction muffler
- 20 - Cylinder head
- 21 - Cylinder head screw

- 22 - Rotor
- 23 - Oil Pump
- 24 - Stator
- 25 - Front suspension bracket
- 26 - Back suspension bracket
- 27 - Stator screw
- 28 - Suspension spring
- 29 - Hermetic terminal
- 30 - Hermetic terminal shield
- 31 - Suction connector
- 32 - Discharge connector
- 33 - Service connector
- 34 - Compressor housing
- 35 - Base plate

