

K-Series Compressors

GTK, HKK, HMK, HTK, HXK, HZK


SECCP

Keep electrical equipment clear from oil, chemicals, and water.




When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.


RSCR

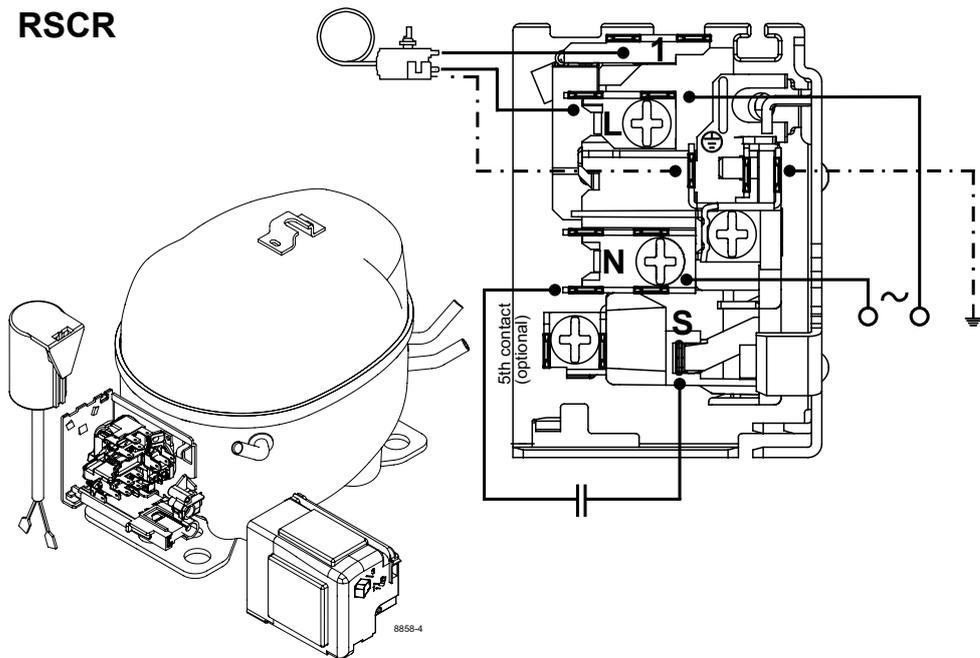


Service/Repair – R600a, R1234yf
(applies to all flammable refrigerants)

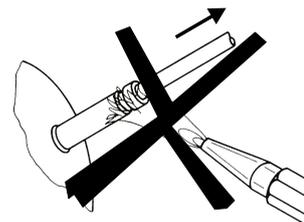

8545-2

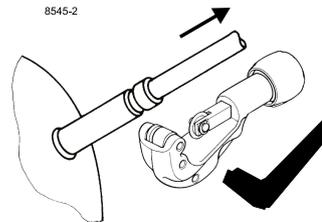

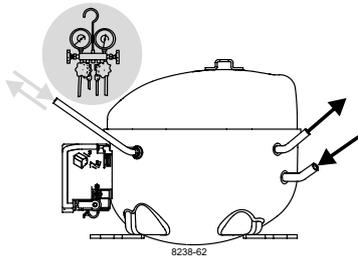

K-Series Compressors

GTK, HKK, HMK, HTK, HXK, HZK




Keep electrical equipment clear from oil, chemicals, and water





When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.

RSIR

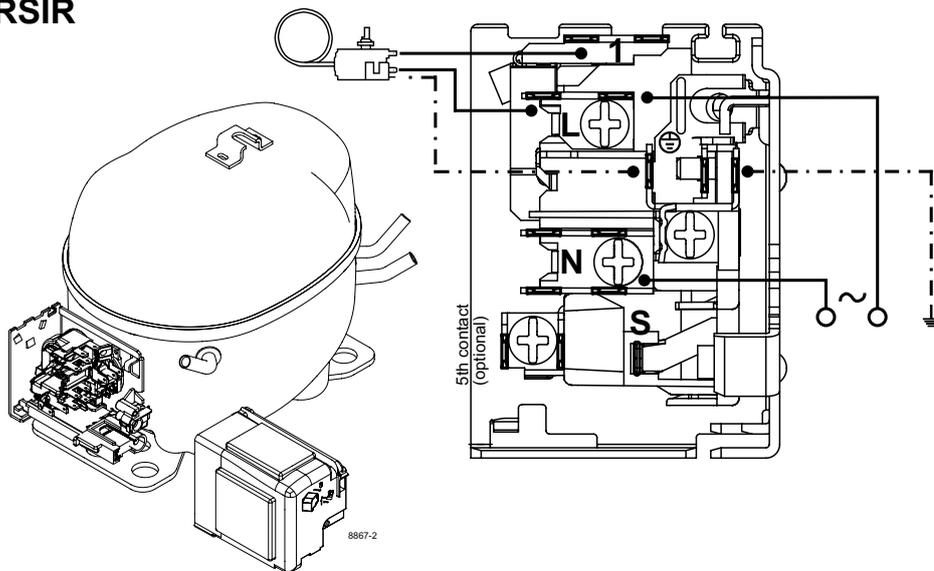

Service/Repair – R600a, R1234yf (applies to all flammable refrigerants)

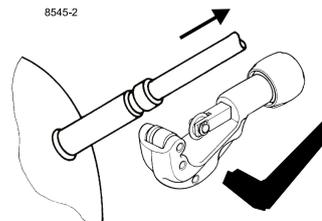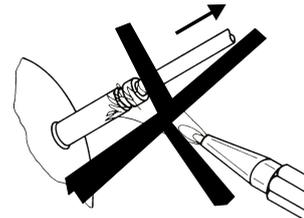

Dismantling, recycling, disposal: At the end of a compressor's lifecycle, proceed by separating and storing components according to their environmental impact. Parts that may cause pollution must be clearly identified and handled separately, ensuring appropriate disposal. Refrigerant gas must not be released into the environment and should be recovered by qualified operators. Compressor oil must also be collected separately. The compressor should be disposed of at specialized disposal centers in accordance with the applicable regulations. **Subject to modifications/alterations. www.seccp.com**