
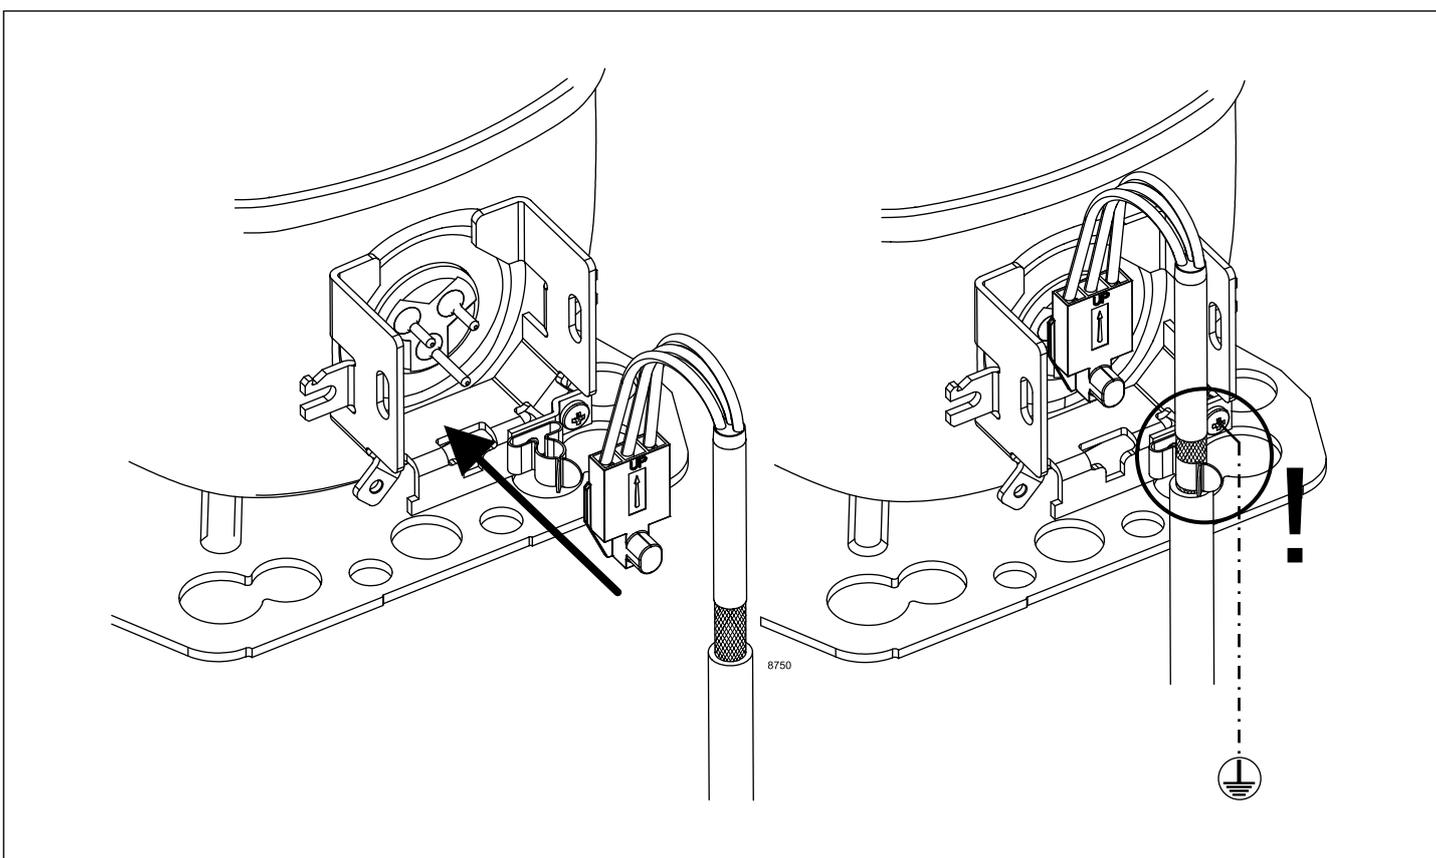



Instructions

NLV Compressors
220-240 V, 50/60 Hz
105N4120 Controllers

SECCP

Keep electrical equipment clear from oil, chemicals, and water

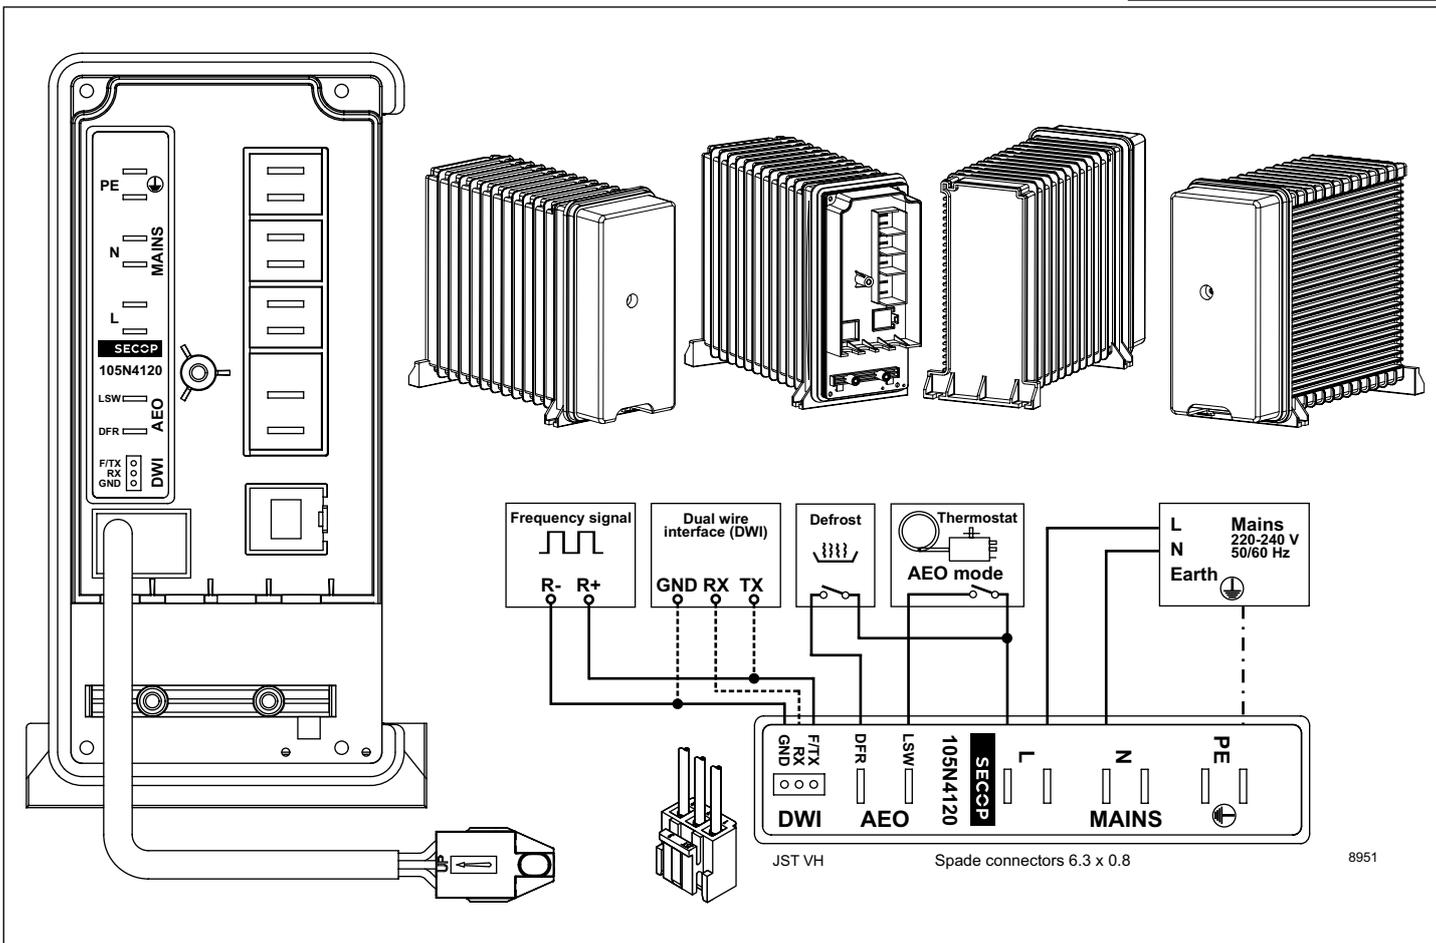

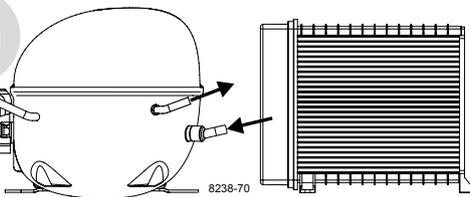

Instructions

NLV Compressors
220-240 V, 50/60 Hz
105N4120 Controllers

SECCOP

Keep electrical equipment
clear from oil, chemicals,
and water



Service/Repair – R170, R290, R1270

(applies to all flammable refrigerants)





R170



R290




R1270

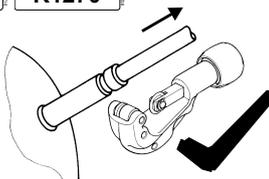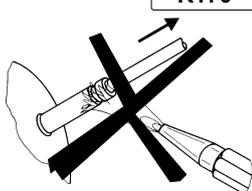

8545

Brazing on Suction Connectors (Direct Intake)

representative image

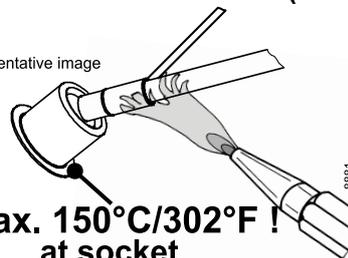


**! max. 150°C/302°F !
at socket**

brazing solder: phosphor (LP7) or silver

Refer to Product Bulletin: **Brazing on Suction Connectors
(Compressors with Direct Suction Intake)**

Ensure Proper Airflow of 3 m/s at Both Compressor and Electronic Unit (Heatsink)

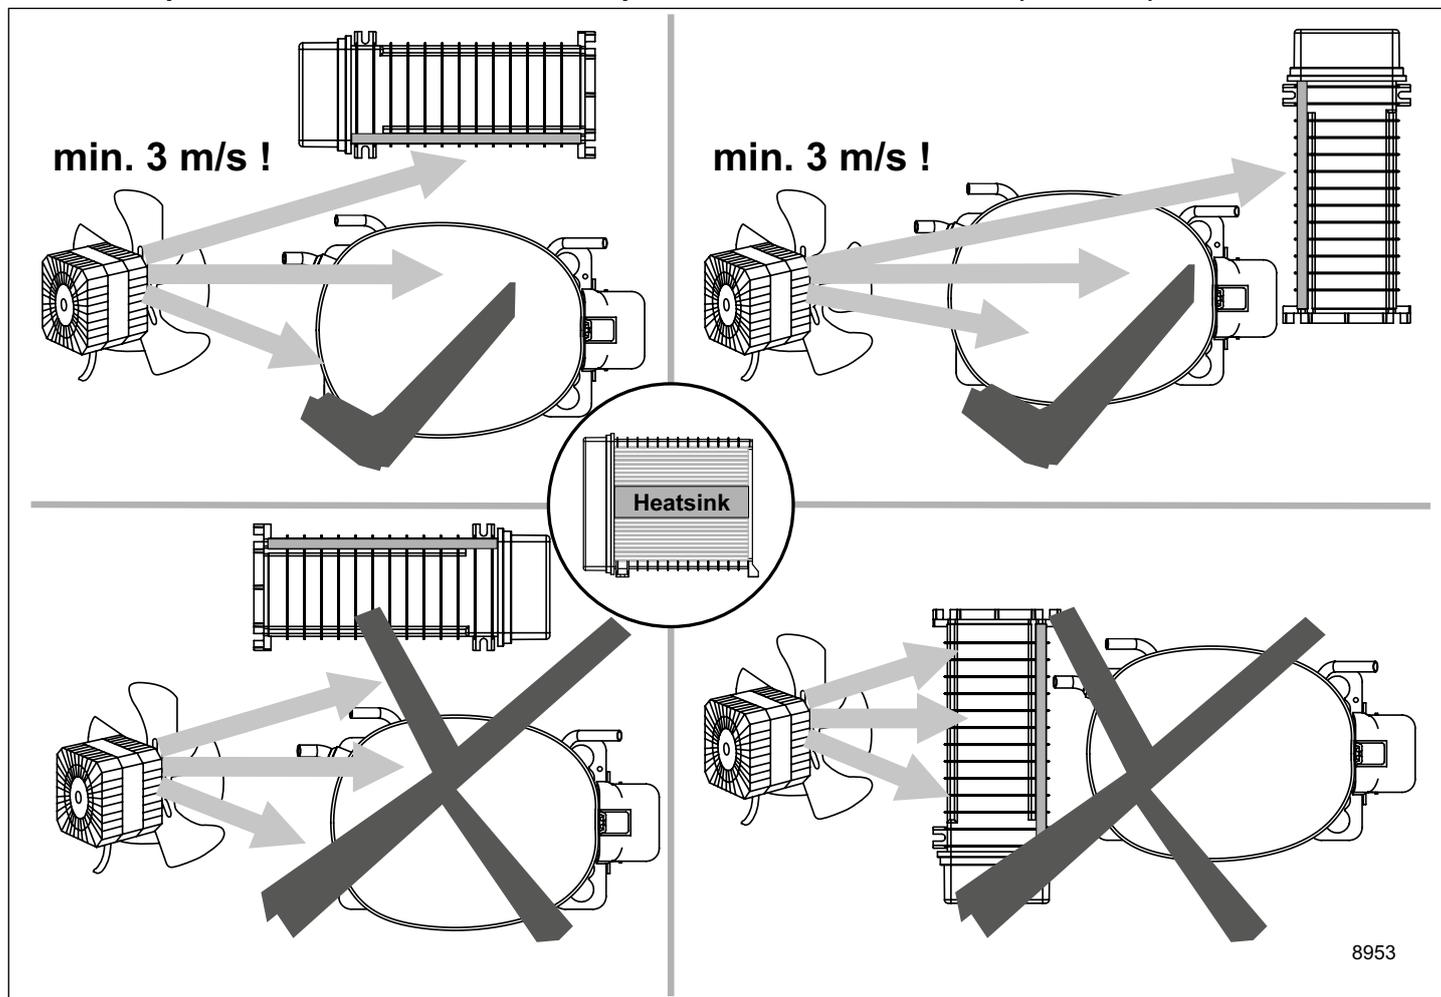

8953

Airflow	3 m/s
Operating conditions	+ 5 °C to 43 °C - humidity < 90 % rH non condensing
Storage conditions	-25 °C to 70 °C - humidity < 90 % rH non condensing
Supply voltage	220-240 V (± 10 %)
Frequency	50/60 Hz
Input power, max.	1000 W

Dismantling, recycling, disposal: At the end of a compressor's lifecycle, proceed by separating and storing components according to their environmental impact. Parts that may cause pollution must be clearly identified and handled separately, ensuring appropriate disposal. Refrigerant gas must not be released into the environment and should be recovered by qualified operators. Compressor oil must also be collected separately. The compressor should be disposed of at specialized disposal centers in accordance with the applicable regulations. **Subject to modifications/alterations. www.secop.com**