PRODUCT BULLETIN

SECOP

Run Capacitor Holder P / T / D / N-Series Compressors

A run capacitor holder is available for the "Energy optimized" and "High Energy optimized" compressor range.

This optional part is fixed to the run capacitor directly and earth connected on the compressor shell, concentrating all electrical accessories on the compressor.
This will save space in the machine compartment.

See drawing four mounting sequence.

Code numbers

run capacitor holder	117-0300
screw M4 x 8 PZD 2	117-0301

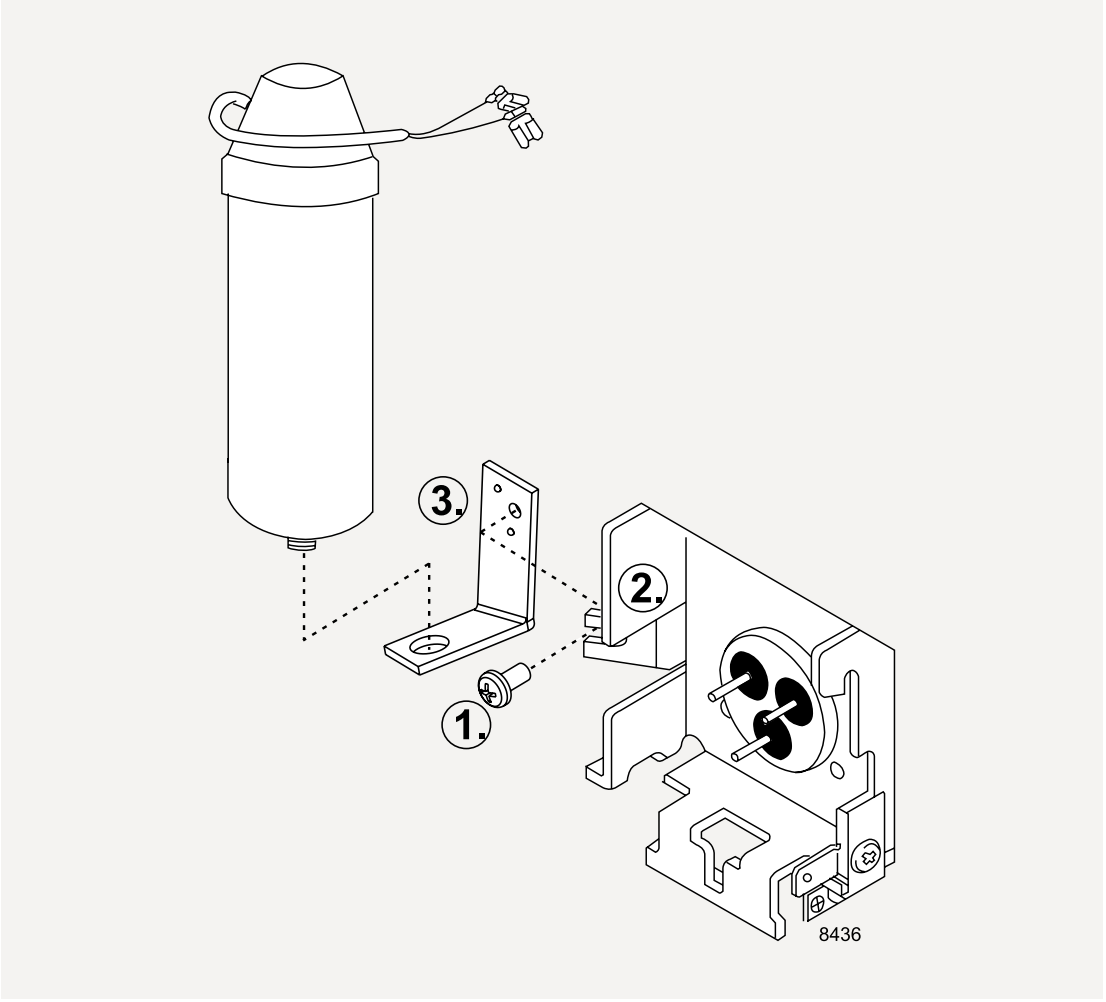

Secop GmbH
Lise-Meitner-Straße 29
24941 Flensburg
Germany
Tel: +49 461 4941 0
www.secop.com

Secop accepts no responsibility for possible errors in catalogs, brochures, and other printed material. Secop reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary to specifications already agreed. All trademarks in this material are the property of the respective companies. Secop and the Secop logotype are trademarks of Secop GmbH. All rights reserved.

DES.N.200.T1.02 Produced by Secop GmbH, jb, 08.2021