

# PBC-2.0 Compressor for 40-Litre Portable Cooling Boxes 12/24V DC R134a



#### GENERAL

Code number compressor with electronic unit	SBC00N20		
Electronic unit	30 pcs: 101N0219		
Compressors on pallet	150		

# APPLICATION

Application		LBP/MBP	
Evaporating temperature	°C	-30 to 0	
Voltage range DC	VDC	9.6 - 17 / 21.3 - 31.5	
Max. condensing temperature continuous	(short) °C	60 (70)	
Max. winding temperature continuous (she	ort) °C	125 (135)	

## **COOLING REQUIREMENTS**

Application	LBP	MBP	HBP
32°C	S	S	S
38°C	S	S	S
43°C	S	S	S

# MOTOR

Motor type		variable speed
Resistance, all 3 windings (25°C)	Ω	2.2

## DESIGN

Displacement	cm <sup>3</sup>	2.00
Oil quantity (type)	cm <sup>3</sup>	150 (polyolester)
Maximum refrigerant charge	g	300
Free gas volume in compressor	cm <sup>3</sup>	870
Weight - Compressor/Electronic unit	kg	4.3 / 0.19

# STANDARD BATTERY PROTECTION SETTINGS


Voltage		12V	24V
Cut out	VDC	10.4	22.8
Cut in	VDC	11.7	24.2

#### 170 78.5 $\odot$ 0 2 $\bigcirc$ 00 $\odot$ $\odot$ ā (<u>ø16</u> ø9 ø4.2 $\widehat{\mathbf{C}}$ (D)(E) 127 20 BA B1 Β2 201 8269**-**4


204



DIMENSIONS				
Height	mm	А	137	
		В	135	
		B1	128	
		B2	73	
Suction connector	location/I.D. mm   angle	С	6.2   40°	
	material   comment		Cu-plated steel   Al cap	
Process connector	location/I.D. mm   angle	D	6.2   45°	
	material   comment		Cu-plated steel   Al cap	
Discharge connector	location/I.D. mm   angle	Е	5.0   21°	
	material   comment		Cu-plated steel   Al cap	
Connector tolerance	I.D. mm		±0.09, on 5.0 +0.12/+0.20	

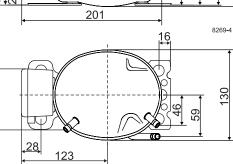

88



# ELECTRONIC UNIT

	DC supply voltage range [V]	9.6 - 17		Res	sistor (R1)	[Ω]	N	lotor spee	d
Supply voltage		21.3 - 31.5	sor	cal	culated va	lues		[rpm]	
Sup	Fuses (DIN 7258) required for 12/24V DC [A]	15 / 7.5	mpress		0			2,000	
	Main switch [A]	min. 20	duds		277			2,500	
			Ö		692			3,000	
ure	Ambient temperature operation [°C]	43			1523			3,500	
osı	Ambient temp. during storage/transport [°C]	-40 to 85		<u> </u>				· · · · · · · · · · · · · · · · · · ·	
Ambient enclosure	IP Class	20		-	ize		ength * Max. leng		•
<b>₹</b> ∞	Weight [kg]	0.19	sions	Cross	AWG	12V op	eration	24V op	eration
			io.	section					
	Spade Connectors [mm]	6.3	ens	[mm <sup>2</sup> ]	[Gauge]	[m]	[ft.]	[m]	[ft.]
ity	Fan [V/W <sub>max</sub> ]	12 / 6	dimen	2.5	12	2.5	8	5	16
Connectivity	NTC sensor	no	Wire o	4	12	4	13	8	26
nne	LED (alarm)	yes	Ň	6	10	6	20	12	39
Ö	Setpoint selection	M / -		10	8	10	33	20	66
	(mechanical thermostat -M /external resistor -R)	IVI / -	L			-	between ba	_	

Optional battery protection settings


1 21	•					
Resistor (8) kΩ	12V cut-out [V]	12V cut-in [V]	12V max. [V]	24V cut-out [V]	24V cut-in [V]	24V max. [V]
0	9.6	10.9	17.0	21.3	22.7	31.5
1.6	9.7	11.0	17.0	21.5	22.9	31.5
2.4	9.9	11.1	17.0	21.8	23.2	31.5
3.6	10.0	11.3	17.0	22.0	23.4	31.5
4.7	10.1	11.4	17.0	22.3	23.7	31.5
6.2	10.2	11.5	17.0	22.5	23.9	31.5
11	10.5	11.8	17.0	23.0	24.5	31.5
14	10.6	11.9	17.0	23.3	24.7	31.5
18	10.8	12.0	17.0	23.6	25.0	31.5
24	10.9	12.2	17.0	23.8	25.2	31.5
33	11.0	12.3	17.0	24.1	25.5	31.5
47	11.1	12.4	17.0	24.3	25.7	31.5
82	11.3	12.5	17.0	24.6	26.0	31.5
220	9.6	10.9				31.5


## Mounting


The cable plug of the electronic unit is mounted on the pins of the current lead-in on the compressor.

Then the electronic unit itself is mounted on the bracket of the compressor. At first the left side is mounted, then the right side is pressed over the screw on the bracket (sideways, marked in grey).

The electronic unit snaps on to the bracket and is now securely mounted on the compressor.

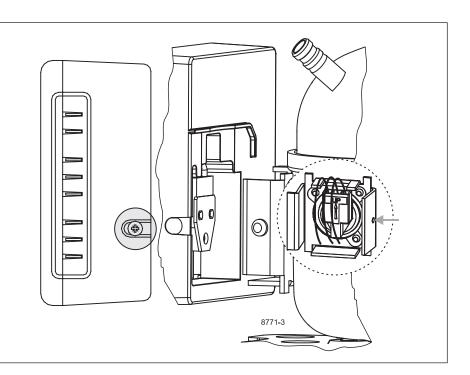



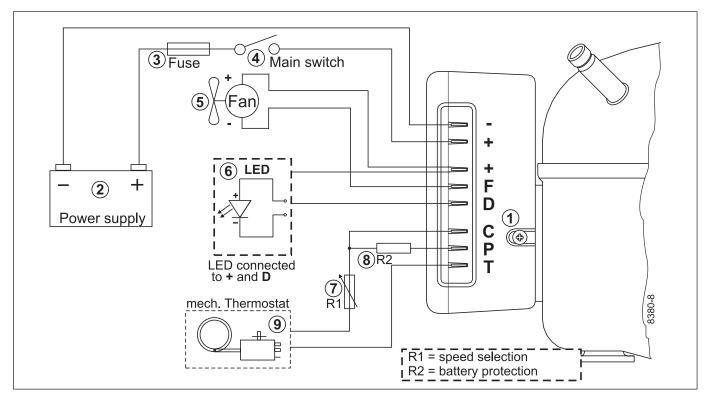

The electronic unit is a dual voltage device. This means that the same unit can be used in both 12V and 24V power supply systems. Maximum voltage is 17V for a 12V system and 31.5V for a 24V power supply system. Max. ambient temperature is 43°C. The electronic unit has a built-in thermal protection which is actuated and stops compressor operation if the electronic unit temperature gets too high.

## Intended applications and refrigerants

This electronic unit is intended for portable box applications only. It may only be used with compressors with a R134a refrigerant.

The compressor may only be operated within the imits stated in the compressor datasheet.

## Installation

Connect the terminal plug from the electronic unit to the compressor terminal. Mount the electronic unit on the compressor by snapping the cover over the screw head (1).

#### **Power supply**

The electronic unit must always be connected directly to the battery poles (2). The electronic unit is protected against reverse battery connection. A fuse (3) must be mounted in the + cable as close to the battery as possible. 15A fuse for 12V and 7.5A fuse for 24V circuits are recommended.

If a main switch (4) is used, it should be rated to a current of min. 20A. The wire dimensions (refer to page 2) must be observed.

Avoid extra junctions in the power supply system to prevent voltage drop from affecting the batteryprotection setting.

#### **Battery protection**

The compressor stops and restarts according to the voltage measured on the + and - terminals of the electronic unit. The standard settings can be found on page 1.

Other settings are optional if a R2 resistor (8) is connected between terminals  ${f C}$  and  ${f P}$ .

#### Fan (optional)

A fan (5) can be connected between the terminals + and F. A 12V fan must be used for both 12V and 24V power supply systems. The fan output can supply a continous current of  $0.5A_{avg}$ . A higher current draw is allowed for 2 seconds during start.

## Speed selection

A mechanical thermostat (9) can be connected between the terminals  ${\bf C}$  and  ${\bf T}.$ 

If a mechanical thermostat is used without any R1 resistor (7), the compressor will run with a fixed speed of **2,000 rpm**. Other fixed compressor speeds in the range between 2,000 and 3,500 rpm can be obtained when a resistor (7) is installed. Resistor values for various motor speeds can be found on page 2.


#### LED error handling

A 10mA light emitting diode (LED) (6) can be connected between the terminals + and  ${\bf D}.$ 

In case the electronic unit records an operational error, the diode will flash a number of times. The number of flashes depends on what kind of operational error was recorded. Each flash will last ¼ second. After the actual number of flashes there will be a delay with no flashes, so that the sequence for each error recording is repeated every 4 seconds

#### **Operational errors**

LED flashes	Error type
	Thermal cut-out of electronic unit
5	(If the refrigeration system has been too heavily loaded, or if the ambient temperature is high, the electronic unit will run too hot).
	Minimum motor speed error
4	(If the refrigeration system is too heavily loaded, the motor cannot maintain minimum speed at approximately 1,850 rpm).
	Motor start error
3	(The rotor is blocked or the differential pressure in the refrigeration system is too high (>5 bar)).
	Fan over-current cut-out
2	(The fan loads the electronic unit with more than $0.5A_{avg}$ ).
	Battery protection cut-out
1	(The voltage is outside the cut-out setting).



## PERFORMANCE DATA

Speed				RAE (Internation =54.4°C, Tliq=32	5	,		
	LBP rating point -23.3°C / 54.4°C				MBP rating point -6.7°C / 54.4°C			
	Cooling capacity	СОР	Power consumption	Current ** consumption	Cooling capacity	СОР	Power consumption	Current ** consumption
[rpm]	[W]	[W/W]	[W]	[A]	[W]	[W/W]	[W]	[A]
2,000	33.4	1.36	24.6	2.0	82.7	2.1	39.5	3.3
2,500	42.4	1.33	32.0	2.7	104	2.01	51.5	4.0
3,000	46.5	1.27	36.7	3.1	121	1.98	61.4	5.1
3,500	50.5	1.15	43.8	3.6	140	1.95	71.8	6.0

				ASHRAE (Im	perial Units)			
				Tc=130°F, Tliq=9	0°F, Tsuc=90°F			
Speed			ing point / 130°F		MBP rating point 20°F / 130°F			
	Cooling capacity	EER	Power consumption	Current ** consumption	Cooling capacity	EER	Power consumption	Current ** consumption
[rpm]	[BTU/h]	[BTU/Wh]	[W]	[A]	[BTU/h]	[BTU/Wh]	[W]	[A]
2,000	114	4.63	24.5	2.0	283	7.15	39.5	3.3
2,500	144	4.51	31.9	2.7	354	6.86	51.6	4.3
3,000	158	4.31	36.6	3.1	415	6.74	61.5	5.1
3,500	172	3.93	43.7	3.6	479	6.65	72.0	6.0

\*\* for 24V applications the values must be halfed

# MOUNTING ACCESSORIES

Bolt joint for one compressor	Ø:16 mm	118-1917	Washer Bolt Compressor base Sleeve	Washer Clip Compressor base
Bolt joint in quantities	Ø:16 mm	118-1918		
Snap-on in quantities	Ø:16 mm	118-1919	Cabinet base Nut Rubber grommet	Cabinét base Rubber grommet

Secop accepts no responsibility for possible errors in catalogs, brochures, and other printed material. Secop reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary to specifications already agreed. All trademarks in this material are the property of the respective companies. Secop and the Secop logotype are trademarks of Secop GmbH. All rights reserved. www.secop.com