Singolo
Imballi

Single Pack NF8.4FX.2 115-127V 60Hz CSIR

Codice Imballo Singolo: **195B4012**

Posizione	Titolo	Codice	Quantità
1	Compressor NF8.4FX.2	105G5913	1
2	Bolt joint for one compressor | M6 | ø16mm	118-1917	1
Below electrical equipment is pre-assembled on the compressor:			
3	Starting relay (overload protector MRT22AFZ-6)	117U4129	1
4	Starting capacitor (280µF 125V, 6.3mm)	117U5025	1
5	Cord relief	117U0349	2
6	Cover	117U1021	1

Secop GmbH • Lise-Meitner-Straße 29 • 24941 Flensburg, Germany • Tel: +49 461 4941 0 • **www.secop.com**

Secop non si assume alcuna responsabilità per eventuali errori presenti in cataloghi, brochure e altro materiale stampato. Secop si riserva il diritto di modificare i propri prodotti senza preavviso. Ciò vale anche per i prodotti già ordinati, a condizione che tali modifiche possano essere apportate senza che siano necessarie modifiche successive alle specifiche già concordate. Tutti i marchi presenti in questo materiale sono di proprietà delle rispettive aziende. Secop e il logo Secop sono marchi di Secop GmbH. Tutti i diritti sono riservati.

Model
NF8.4FX.2

Sales code:
105G5913

Compressor Data

Refrigerant(s)	**R134a**
Refr. charge - tech. limit	**400g / 14.11oz**
Weight	**10.00 kg / 22.05lbs**
Displacement	**8.35 cm3 / 0.51cu.in**
Compressors on pallet	**80**

General – Configurations With NF8.4FX.2

–	**Conf. 1**
Motor configuration	CSIR
Power supply (nominal)	115-127 V/60 Hz
Number of phases	1
Voltage range	95-135 V
Approvals	UL
Starting torque	HST
Refrigerant	R134a
Application	LBP+MBP
Long interval pull down	OK

Application Notes

- Electrical equipment is included and pre-assembled to compressor.
- Provision for PE Grounding is located at the PE Stamp on the compressor

Model
NF8.4FX.2

Sales code:
105G5913

Compressor Design

Oil type	**POE**	Winding resistance main	**1.7 Ohm**
Oil viscosity	**32cSt**	Winding resistance aux	**6.2 Ohm**
Oil quantity	**268 / 9.06fl.oz**	Max. winding temp.	**125 °C**
Free gas volume comp.	**2,360 cm3 / 79.80fl.oz**	Max. discharge temp.	**130°C / 266°F**
Motor protection	**external**		

Compressor Dimensions

Housing

A Height	**197mm / 7.76in**
B Height	**191mm / 7.52in**
C Length shell	**205mm / 8.07in**
D Length w. cover	**254mm / 10.00in**
E Width	**166mm / 6.54in**

Find 3D Model here

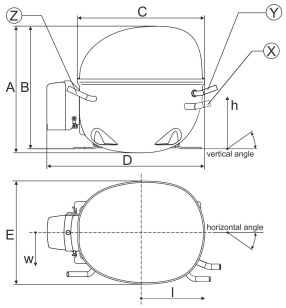

Connectors	Suction X	Discharge Y	Process Z
Diameter [mm]	øi 8.11–8.29 / 0.32–0.33in	øi 6.41–6.59 / 0.25–0.26in	øi 6.41–6.59 / 0.25–0.26in
Material	CU	CU	CU
Horizontal angle ±2°	0°	0°	0°
Vertical angle ±2°	15°	35°	155°
Position l/h/w [mm]	125.5/75.5/78 / 4.94/2.97/3.07in	133/102.5/54 / 5.24/4.04/2.13in	-107/93.5/72 / -4.21/3.68/2.83in
Straight tube l. [mm]	12 / 0.47in	12 / 0.47in	12 / 0.47in

Mounting Accessories

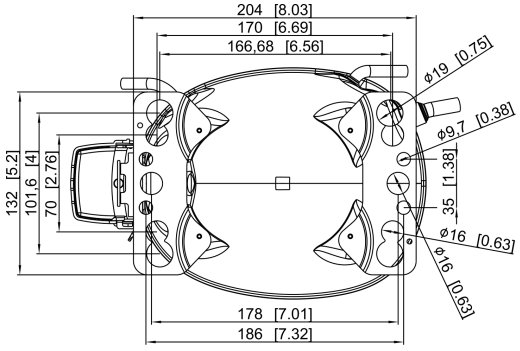

Dimensions in mm [in]

Bolt joint

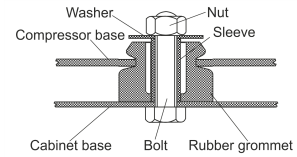

Snap-on

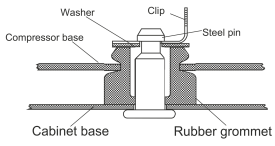

	one comp.	multi pack
Bolt joint | M6 | ø16mm	118-1917	118-1918
Bolt joint | ø1/4" | ø16mm	118-1946	–
Bolt joint | ø1/4" | ø19mm	118-1949	–
Snap-on | ø7,3 | ø16mm	118-1947	118-1919

Model
NF8.4FX.2 Configuration 1

Sales code:
105G5913

Configuration

Motor configuration	**CSIR**
Power supply (nominal)	**115-127 V/60 Hz 1~**
Refrigerant	**R134a**
Application	**LBP+MBP**
Voltage range	**95-135 V**
Starting torque	**HST**
Approvals	**UL**
Starting device type	**relay**
Run capacitor	**-/-**
Start capacitor	**280 µF**

Ambient/ machine room temperatures minimum /maximum
Ambient temperature range: 10 - 43°C / 50 - 109°F
Machine room temp. compressor: 10 - 48°C / 50 - 118°F

System Cooling
fan 1,5m/s

Electrical Accessories / Wiring Diagram

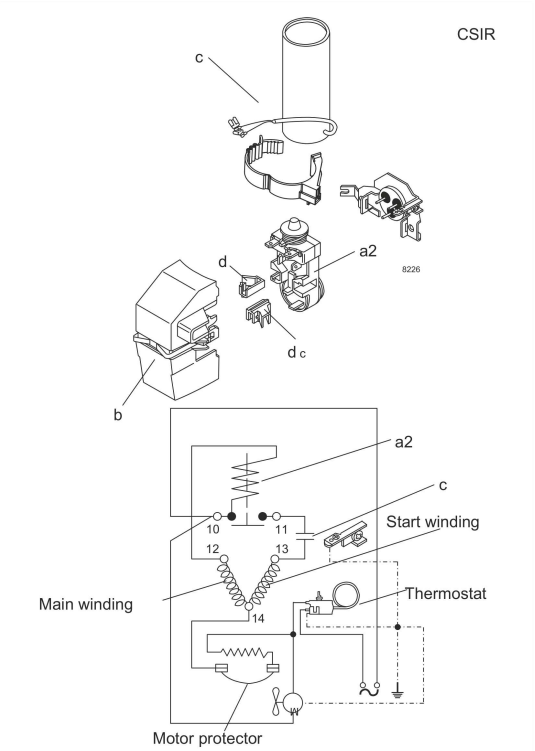

View full size

Components (already pre-assembled)
a2 current relay (MRT22AFZ-6) 117U4129
c start capacitor (280µF) 117U5025
b plastic cover + clamp 117U1021
d/dc cord relief 117U0349

Operation Pressure Range

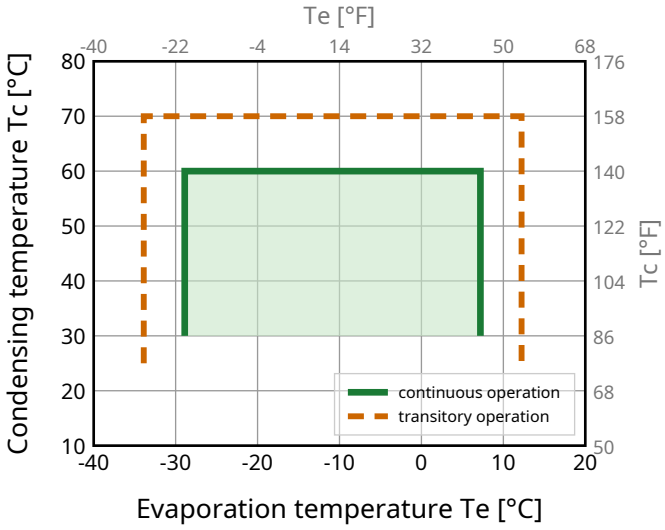

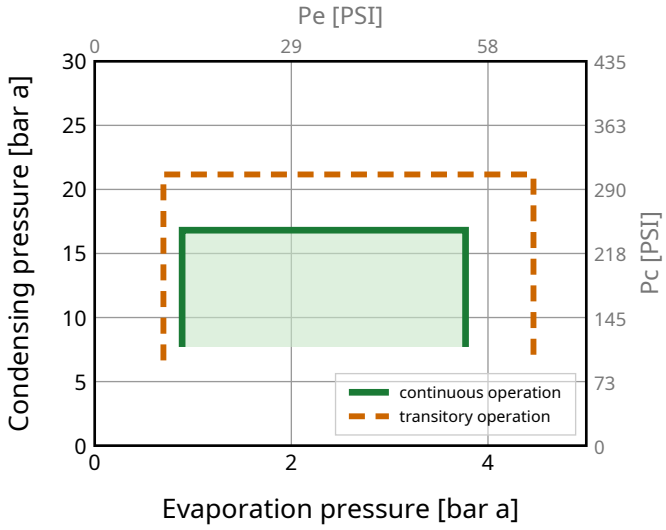

Model Sales code:

NF8.4FX.2 Configuration 1 **105G5913**

Standard Conditions

R134a, 115 V/60 Hz, CSIR, fan 1,5m/s

pe	pc	RGT	Tliq	Cooling capacity			COP	EER	P	I	ṁ	
[°C] [°F]	[°C] [°F]	[°C] [°F]	[°C] [°F]	[W]	[Btu/h]	[kcal/h]	[W/W]	[Btu/Wh]	[W]	[A]	[kg/h]	
-23.3 -10	54.4 129.9	32.2 90	32.2 90	**302**	1031	260	**1.22**	4.16	248	3.68	5.86	**ASHRAE LBP**
-25 -13	55 131	32 89.6	55 131	**221**	753	190	**0.94**	3.19	236	3.63	5.26	**CECOMAF LBP**
-35 -31	40 104	20 68	40 104	**150**	513	129	**0.83**	2.84	180	3.42	3.29	**EN12900 LBP**
-6.7 20	54.4 129.9	35 95	46.1 115	**620**	2117	534	**1.72**	5.87	361	4.31	13.51	**ASHRAE MBP**
-10 14	55 131	32 89.6	55 131	**484**	1650	416	**1.43**	4.87	339	4.17	11.66	**CECOMAF MBP**
-10 14	45 113	20 68	45 113	**544**	1857	468	**1.69**	5.77	322	4.06	12.70	**EN12900 MBP**

Performance Tables

R134a, 115 V/60 Hz, CSIR, fan 1,5m/s

pc= 45/113 | RGT= 32/89.6 | Tliq= 45/113 | °C/°F

pe		Cooling capacity			COP	EER	P	I	ṁ
[°C]	[°F]	[W]	[Btu/h]	[kcal/h]	[W/W]	[Btu/Wh]	[W]	[A]	[kg/h]
-30	-22	**198**	676	170	**0.95**	3.26	208	3.49	4.28
-20	-4	**353**	1203	303	**1.32**	4.52	266	3.74	7.65
-10	14	**564**	1924	485	**1.75**	5.97	322	4.06	12.31
0	32	**844**	2878	725	**2.21**	7.52	382	4.47	18.61
7.2	45	**1094**	3733	941	**2.52**	8.62	433	4.81	24.38

pc= 55/131 | RGT= 32/89.6 | Tliq= 55/131 | °C/°F

-30	-22	**160**	545	137	**0.80**	2.74	199	3.49	3.80
-20	-4	**294**	1002	253	**1.08**	3.70	271	3.79	7.03
-10	14	**484**	1650	416	**1.43**	4.87	339	4.17	11.66
0	32	**741**	2528	637	**1.80**	6.16	411	4.64	18.07
7.2	45	**975**	3325	838	**2.08**	7.09	469	5.03	24.03

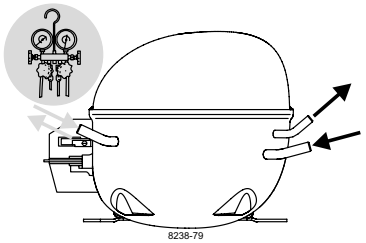

NF Compressors

SECOP

Keep electrical equipment clear from oil, chemicals, and water

When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.

RSIR

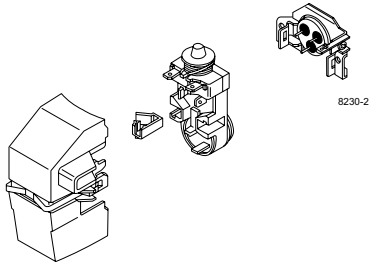

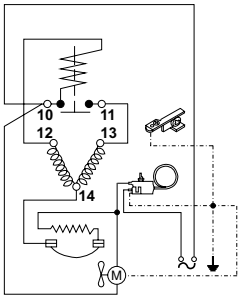

CSIR

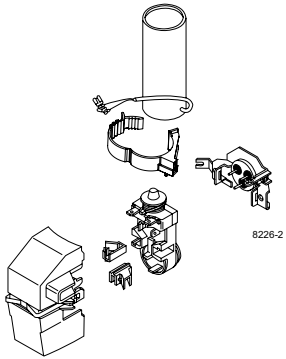

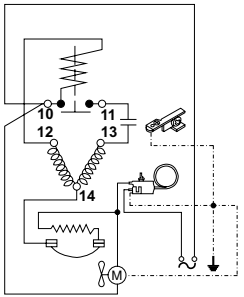

Service/Repair – R1234yf

(applies to all flammable refrigerants)

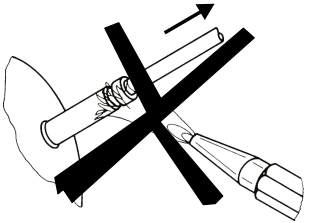

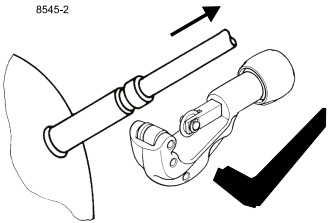

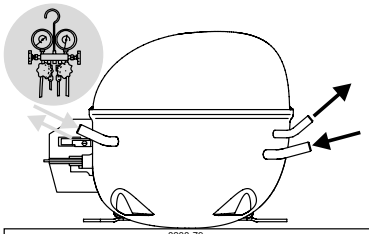

NF Compressors

SECOP

Keep electrical equipment clear from oil, chemicals, and water

When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.

RSIR

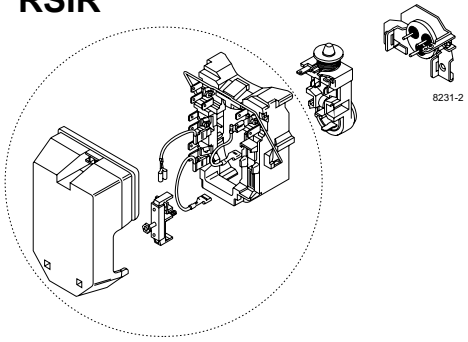

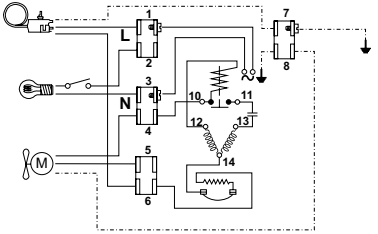

CSIR

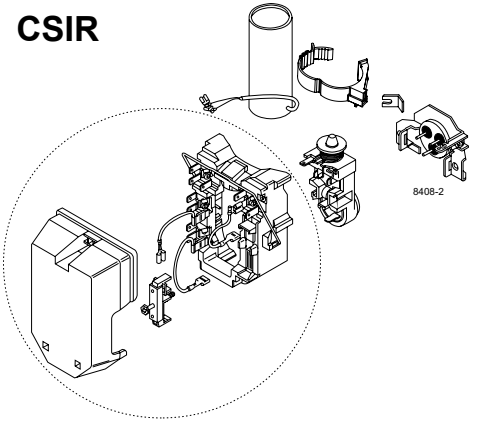

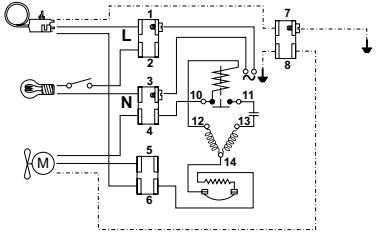

Service/Repair – R1234yf

(applies to all flammable refrigerants)

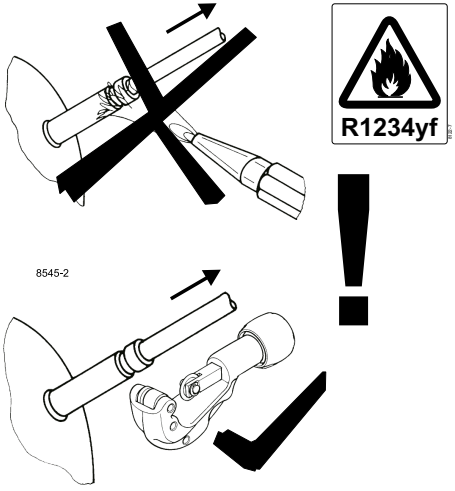

Dismantling, recycling, disposal: At the end of a compressor's lifecycle, proceed by separating and storing components according to their environmental impact. Parts that may cause pollution must be clearly identified and handled separately, ensuring appropriate disposal. Refrigerant gas must not be released into the environment and should be recovered by qualified operators. Compressor oil must also be collected separately. The compressor should be disposed of at specialized disposal centers in accordance with the applicable regulations. **Subject to modifications/alterations. www.secop.com**