Single
Packs

Single Pack HMK95AA 220-240V 50Hz RSIR

Single pack code number: **195B4542**

Position	Title	Code	Amount
1	Compressor HMK95AA	15853800	1
2	Terminal board 4.8mm	15163500	1
3	Screw for cable clamp	10636000	1
4	Screw for cable clamp	10636200	1
5	Cable clamp	11341000	1
6	Cover	10636401	1
7	Earth screw	10641201	1
8	Sleeve	10640100	4
9	Rubber grommet 16.5mm	10639900	4

Secop GmbH • Lise-Meitner-Straße 29 • 24941 Flensburg, Germany • Tel: +49 461 4941 0 • **www.secop.com**

Secop accepts no responsibility for possible errors in catalogs, brochures, and other printed material. Secop reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary to specifications already agreed. All trademarks in this material are the property of the respective companies. Secop and the Secop logotype are trademarks of Secop GmbH. All rights reserved.

Model
HMK95AA

Sales code:
15853800

Compressor Data

Refrigerant(s)	**R600a**
Refr. charge - tech. limit	**150g / 5.29oz**
Weight	**7.90 kg / 17.42lbs**
Displacement	**9.60 cm3 / 0.59cu.in**
Compressors on pallet	**100**

General – Configurations With HMK95AA

–	**Conf. 1**
Motor configuration	RSIR
Power supply (nominal)	220-240 V/50 Hz
Number of phases	1
Voltage range	187-264 V
Approvals	VDE
Starting torque	LST
Refrigerant	R600a
Application	LBP

Application Notes

- Various options of connectors are possible - please contact SECOP-Sales.
- Provision for PE Grounding is located at the PE Stamp on the compressor
- Housing with dip-tray fixture (omega bracket).
- Various options of connectors are possible - please contact SECOP-Sales.

Model
HMK95AA

Sales code:
15853800

Compressor Design

Oil type	**Mineral**	Winding resistance main	**21.1 Ohm**
Oil viscosity	**5cSt**	Winding resistance aux	**19.1 Ohm**
Oil quantity	**165 / 5.58fl.oz**	Max. winding temp.	**130 °C**
Free gas volume comp.	**1,500 cm3 / 50.72fl.oz**	Max. discharge temp.	**130°C / 266°F**
Motor protection	**external**		

Compressor Dimensions

Housing

A Height	**174mm / 6.85in**
B Height	**167mm / 6.57in**
C Length shell	**194mm / 7.64in**
D Length w. cover	**238mm / 9.37in**
E Width	**151mm / 5.94in**

Find 3D Model here

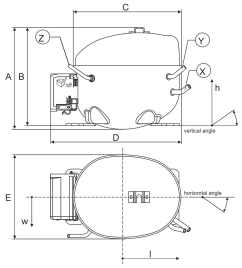

Connectors	Suction X	Discharge Y	Process Z
Diameter [mm]	øi 6.16–6.24 / 0.24–0.25in	øi 5.1–5.2 / 0.20–0.20in	øi 6.11–6.29 / 0.24–0.25in
Material	CU	CU	CU
Horizontal angle ±2°	54°	35°	45°
Vertical angle ±2°	35°	40°	35°
Position l/h/w [mm]	120/92/56.7 / 4.72/3.62/2.23in	112/105.5/81 / 4.41/4.15/3.19in	-86/94.3/72 / -3.39/3.71/2.83in
Straight tube l. [mm]	13.5 / 0.53in	13.5 / 0.53in	13.5 / 0.53in

Mounting Accessories

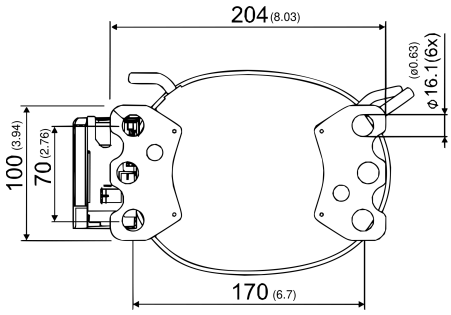

Dimensions in mm [in]

Bolt joint

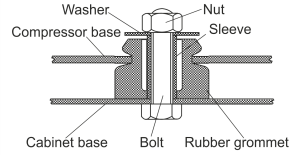

Snap-on

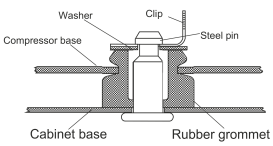

	one comp.	multi pack
'4ZN' with rubber grommet	–	772N
'4ZN' with rubber grommet and sleeve for M6	–	768N
Bolt joint kit	–	4ZN + 118-1917 (18)
'4ZN' with Snap on kit	–	776N

Model
HMK95AA Configuration 1

Sales code:
15853800

Configuration

Motor configuration	**RSIR**
Power supply (nominal)	**220-240 V/50 Hz 1~**
Refrigerant	**R600a**
Application	**LBP**
Voltage range	**187-264 V**
Starting torque	**LST**
Approvals	**VDE**
Starting device type	**PTC**
Run capacitor	**-/-**
Start capacitor	**-/-**
LRA (locked rotor amps / 4s/ U(N))	**4.6 A**
RLA (rated load amps / 1s/ U(N))	**1 A**
Cut in current (U(N))	**10.1 A**

Ambient/ machine room temperatures minimum /maximum
Ambient temperature range: 10 - 43°C / 50 - 109°F
Machine room temp. compressor: 10 - 48°C / 50 - 118°F

System Cooling
static

Electrical Accessories / Wiring Diagram

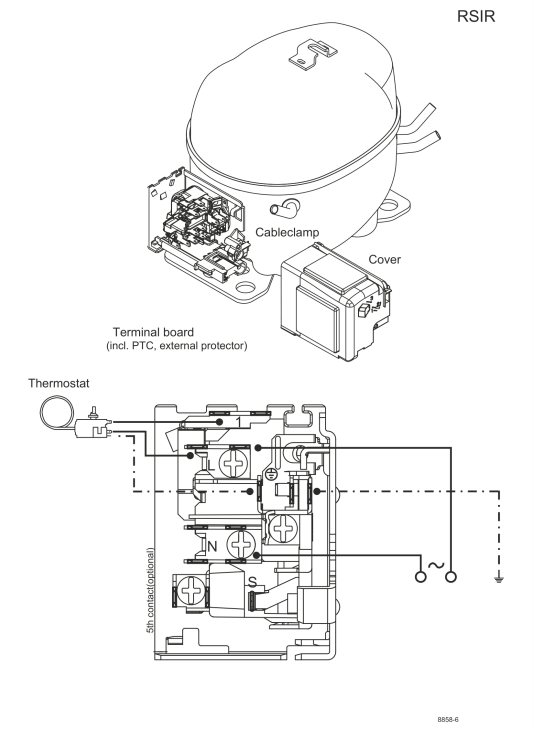

View full size

Components
. terminal board (PTC, 4.8mm) 15163500
b cover terminal board 10636401
. cable clamp 16058100
. screw - uni6954 10636000
. screw - uni6954 10636200
. screw uni en iso 4757 10641201

Alternative components
. terminal board (PTC, 6.3mm) 15279300

Operation Pressure Range

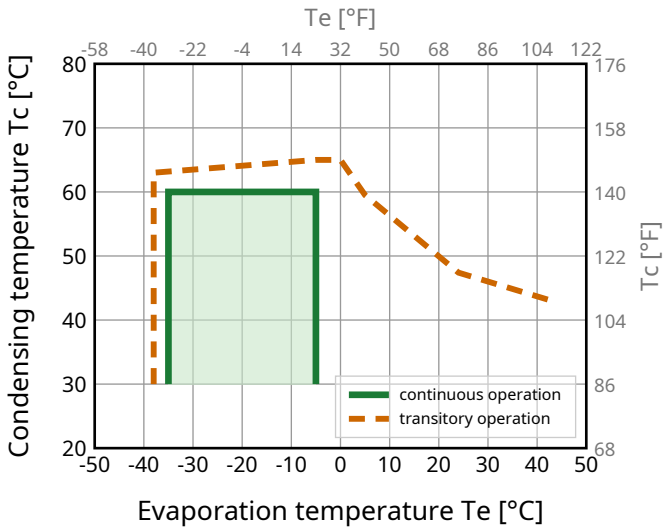

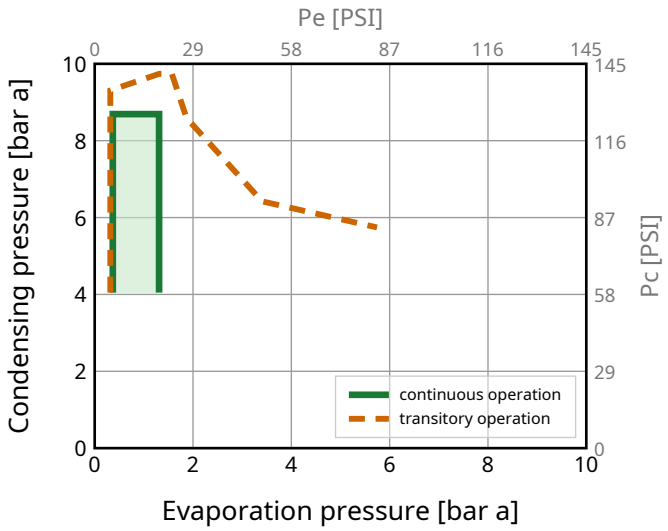

Model Sales code:

HMK95AA Configuration 1 **15853800**

Standard Conditions

R600a, 220 V/50 Hz, RSIR, static

pe	pc	RGT	Tliq	Cooling capacity			COP	EER	P	I	ṁ	
[°C] [°F]	[°C] [°F]	[°C] [°F]	[°C] [°F]	[W]	[Btu/h]	[kcal/h]	[W/W]	[Btu/Wh]	[W]	[A]	[kg/h]	
-23.3 -10	54.4 129.9	32.2 90	32.2 90	**167**	569	144	**1.53**	5.21	109	0.76	1.79	**ASHRAE LBP**
-25 -13	55 131	32 89.6	55 131	**125**	426	108	**1.19**	4.06	105	0.74	1.63	**CECOMAF LBP**
-35 -31	40 104	20 68	40 104	**73**	249	63	**0.99**	3.38	74	0.63	0.89	**EN12900 LBP**
-23.3 -10	48.8 119.8	4.4 39.9	48.8 119.8	**135**	460	116	**1.29**	4.39	105	0.75	1.97	**ARI540 LBP**
-23.3 -10	40.6 105.1	32.2 90	32.2 90	**175**	598	151	**1.77**	6.03	99	0.74	1.88	**AHAM LBP**
-35 -31	45 113	32 89.6	45 113	**72**	247	62	**0.96**	3.28	75	0.62	0.86	**opt LBP**

Performance Tables

R600a, 220 V/50 Hz, RSIR, static

pc= 45/113 | RGT= 32/89.6 | Tliq= 45/113 | °C/°F

pe		Cooling capacity			COP	EER	P	I	ṁ
[°C]	[°F]	[W]	[Btu/h]	[kcal/h]	[W/W]	[Btu/Wh]	[W]	[A]	[kg/h]
-35	-31	**72**	247	62	**0.96**	3.28	75	0.62	0.86
-30	-22	**104**	356	90	**1.21**	4.12	86	0.67	1.24
-25	-13	**142**	484	122	**1.45**	4.94	98	0.73	1.69
-20	-4	**185**	630	159	**1.68**	5.75	110	0.78	2.20
-15	5	**233**	795	200	**1.92**	6.56	121	0.84	2.78
-10	14	**287**	979	247	**2.16**	7.38	133	0.90	3.43
-5	23	**346**	1180	297	**2.41**	8.23	144	0.96	4.15

pc= 55/131 | RGT= 32/89.6 | Tliq= 55/131 | °C/°F

-35	-31	**67**	228	57	**0.85**	2.89	79	0.60	0.87
-30	-22	**93**	317	80	**1.02**	3.47	91	0.67	1.21
-25	-13	**125**	426	108	**1.19**	4.06	105	0.74	1.63
-20	-4	**163**	556	140	**1.36**	4.65	120	0.81	2.13
-15	5	**207**	706	178	**1.54**	5.24	135	0.89	2.71
-10	14	**257**	877	221	**1.71**	5.82	150	0.96	3.37
-5	23	**313**	1067	269	**1.88**	6.40	167	1.04	4.11

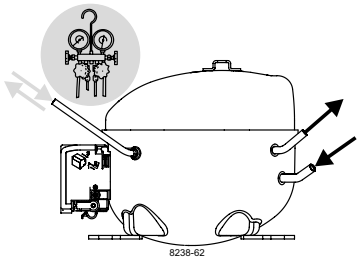

K-Series Compressors
GTK, HKK, HMK, HTK, HXK, HZK

SECOP

Keep electrical equipment clear from oil, chemicals, and water

When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.

RSCR

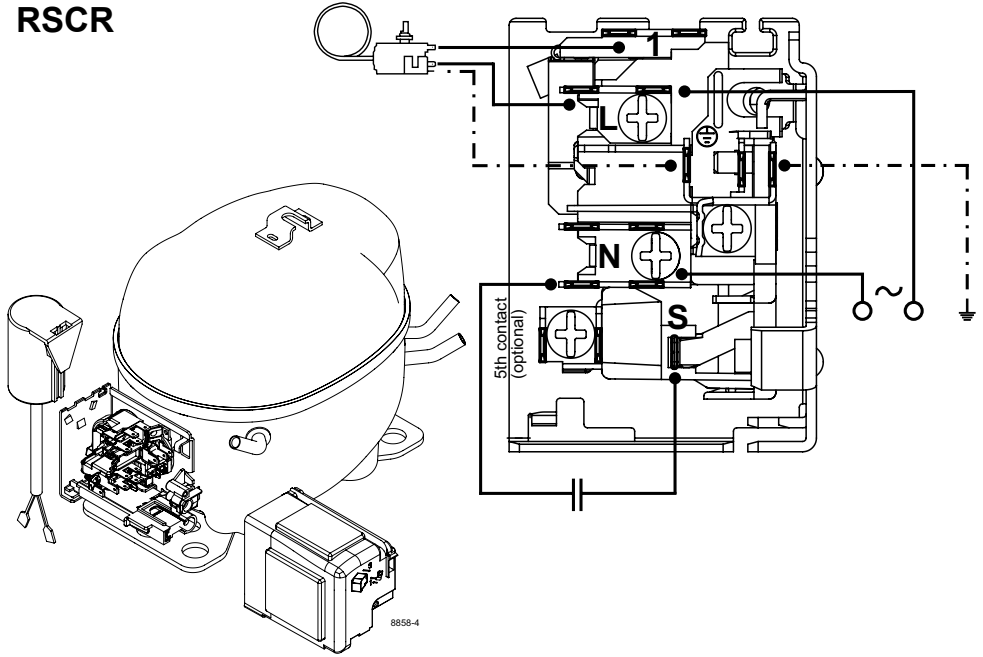

Service/Repair – R600a, R1234yf

(applies to all flammable refrigerants)

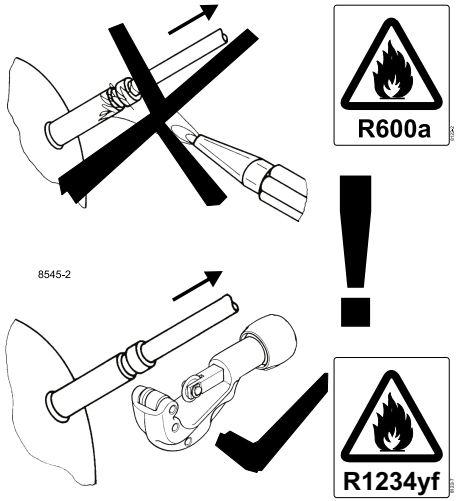

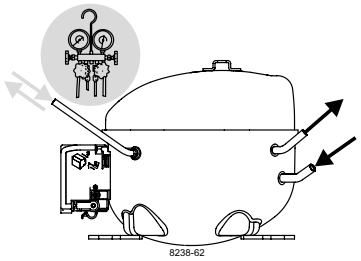

K-Series Compressors
GTK, HKK, HMK, HTK, HXK, HZK

SECOP

Keep electrical equipment clear from oil, chemicals, and water

When operated with a flammable refrigerant, only spark-proof starting equipment is allowed.

RSIR

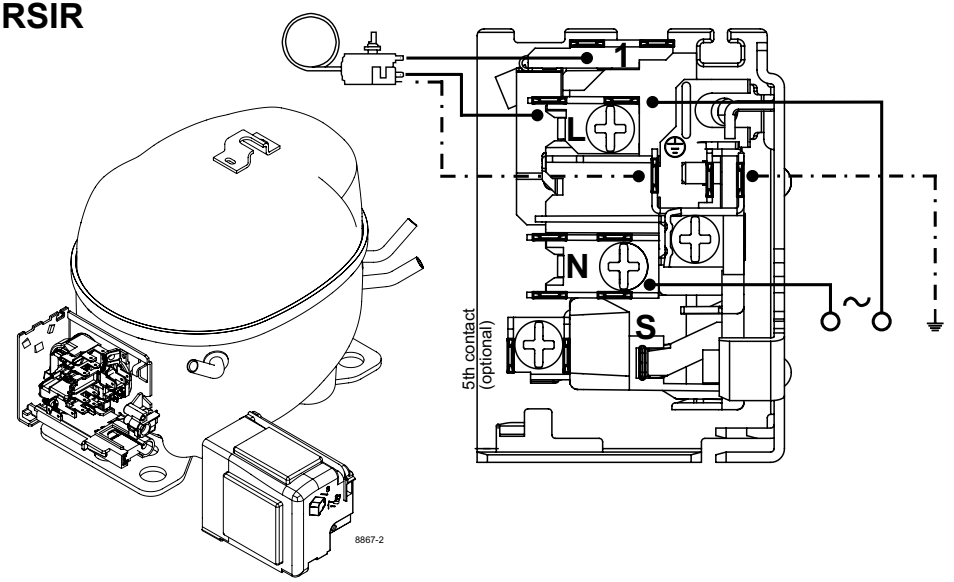

Service/Repair – R600a, R1234yf

(applies to all flammable refrigerants)

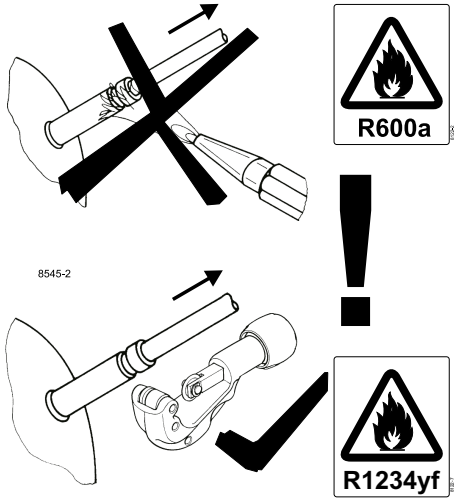

Dismantling, recycling, disposal: At the end of a compressor's lifecycle, proceed by separating and storing components according to their environmental impact. Parts that may cause pollution must be clearly identified and handled separately, ensuring appropriate disposal. Refrigerant gas must not be released into the environment and should be recovered by qualified operators. Compressor oil must also be collected separately. The compressor should be disposed of at specialized disposal centers in accordance with the applicable regulations. **Subject to modifications/alterations. www.secop.com**